


WE ARE HUNTERS

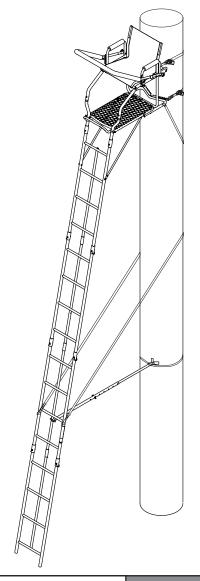

Operator's Manual

UPPERCUT 1-MANLadder Stand

MODEL RE659

Maximum Height 22'3" to shooting rail

Maximum Field Rating 300 lbs

Tree Diameter Range 12" to 20"







YOU MUST READ ALL WRITTEN INSTRUCTIONS AND WATCH THIS SAFETY VIDEO BEFORE USING!



WATCH THIS SAFETY VIDEO BEFORE USING!







or Visit

www.standsafety.com/r3

Scan the QR code with your smart phone, tablet or similar device.

OR

Type the website address into your web browser to view an important safety video before using this product.

LADDER STAND SAFETY

PRODUCT MEETS INDUSTRY STANDARDS RECOGNIZED BY





INTRODUCTION

Rivers Edge® Treestands are engineered with you the hunter in mind. We appreciate your purchase of one of our world class treestands. Follow these few simple instructions and your stand will provide you many years of trouble-free pleasure. Instructions should be kept in a safe place and reviewed at least annually.

If for any reason you have a problem with your product or are missing any parts, **DO NOT return to the retailer**, contact Rivers Edge® Customer Service Department at 800-345-6007 for assistance.

CONTENTS

Introduction/Warranty	
Warnings	
Inspection and Maintenance	
Hardware Identification Chart	
Assembly Instructions	7-12
Warnings	13
Setup and Use Instructions	14-15
Finished Ladder	16
Illustrated Parts Breakdown	17-18
Notes	19

WARRANTY

RETI offers a **one-year warranty** for all components of the treestand. These warranties apply to the original owner with a proof of purchase. These warranties begin on the date of purchase by the first retail consumer and continue for the period specified above. These warranties apply to products that are not modified, abused or used in a manner that deviates from the product's intended usage. Minor fading in color is normal and is not covered by warranty. Any corrosion of painted surfaces that occurs as a result of paint being removed or damaged is also not covered by warranty. RETI offers no other warranty expressed or implied. Products for which warranty work has been approved must be sent directly to RETI and performed by RETI. **To obtain warranty service and/or replacement instructions, you must obtain prior approval from RETI before shipping your package to us by calling our customer service department at 800-345-6007 or by writing to: Ardisam, Inc., P.O. Box 755, 1730 Avenue, Cumberland, WI 54829 for a return material authorization number (RMA#).** All items must be shipped prepaid. RETI will, at no charge, repair or replace, in RETI's sole discretion, any product that satisfies the conditions stated above. RETI retains the right to change models, specifications and price without notice.

This equipment has been manufactured under strict quality and safety guidelines. As with any equipment of this type, full understanding of the instructions and its use is mandatory and imperative for the safety of its user. RETI is not responsible for any damages or injuries sustained due to improper use or modification of any of its products, or resulting from any use which deviates from the product's intended usage. RETI is not responsible for any injuries sustained due to failure to read and adhere to the instructions for use. Any misunderstanding or questions regarding the products of their use should be directed to RETI prior to any use. All RETI treestands are sold with a full body harness ("Fall Arrest System") that meets standards recognized by the Treestand Manufacturer's Association ("TMA"). It is the owner's sole responsibility to inspect the product regularly for damage, improper installation, or conditions that could jeopardize the ultimate safety of the product. Failure to use or improper use of the provided Fall Arrest System may result in serious injury or death. ALWAYS wear the provided Fall Arrest System while using this product. Owner is responsible to understand and follow product field weight rating and must never exceed maximum weight rating. RETI is not responsible for any malfunction or injury resulting from normal wear and tear, damage caused by improper use, improper maintenance, negligence or accidents. This product, if used safely as intended, will provide trouble free service for the useful life of the product. We hope you will enjoy the quality of our products for years to come, and have a safe hunt.



READ AND UNDERSTAND THE FOLLOWING WARNINGS BEFORE ASSEMBLY

MODEL RE659

MAXIMUM USE HEIGHT - 22'3"TO SHOOTING RAIL
MAXIMUM OCCUPANCY - ONE (1)
TOTAL WEIGHT LIMIT - 300 LB
TREE DIAMETER RANGE - 12" TO 20"



WARNING

▲ This product carries strict height and weight restrictions. **Do Not** use this product if you exceed the total weight limit. Please note that the total weight limit includes the user(s) and their equipment.



WARNING

- ▲ When hunting from a treestand falls can occur any time after leaving the ground causing injury or death.
- ▲ Always wear a Fall Arrest System (FAS) comprising a full body harness at all times after leaving the ground. You must stay connected at all times after leaving the ground while using climbing and hang-on treestands. Single safety belts and chest harnesses are no longer allowed and shall never be used. If you are not wearing a full body harness properly attached to the tree that is protecting you from a fall, do not leave the ground.
- ▲ Read and understand all of the manufacturer's Warnings and Instructions and use all safety devices provided by the manufacturer. Contact the manufacturer for any questions. Failure to do so could result in injury or death.
- **A Never** exceed the total weight limit of the treestand.
- ▲ Never use a treestand during inclement weather such as rain, lightning, windstorms or icy conditions and end your hunt and return to the ground if inclement conditions arise.
- ▲ Never use a treestand while using drugs (even prescription drugs) or alcohol.
- ▲ Never use a treestand while feeling ill, nauseous or dizzy, or if you have a prior medical condition that could cause a problem, that is, heart condition, joints that lock-up, spinal fusions, etc., or if you are not well rested. Never sleep in stand.
- ▲ Never use a treestand on a dead, leaning, diseased or loose barked tree, or a utility pole. Always avoid electrical power lines.
- **A Never** rely on a tree branch for support.

A

WARNING

- **A Never** jump or bounce on a treestand to seat it to the tree.
- ▲ Pull up a bow, backpack, or firearm or other equipment only after being secure in the treestand and a firearm must be pulled up with it unloaded, chamber open, and muzzle down.
- ▲ Always inform someone of the hunting location, where the treestand will be located and the expected duration of the hunt.
- ▲ A signal device such as a mobile phone, radio, whistle, signal flare or personal locator device (PLD) must be on your person and readily available at all times.
- ▲ Inspect the treestand and all safety devices each time before use and **Do Not** store a treestand outdoors when not in use.
- ▲ **Never** modify your treestand in any way by making repairs, replacing parts, or altering it except if explicitly authorized in writing by the manufacturer.
- ▲ Practice installing, adjusting and using your treestand at ground level prior to using it at elevated positions. Study your new stand to become familiar with all of its features and design. Doing so will confirm that the product is manufactured, assembled and installed correctly.
- ▲ Instructions (written and video) shall be kept in a safe place and reviewed at least annually. It is the responsibility of the treestand owner to furnish the complete instructions to any person who borrows or purchases the treestand.
- ▲ Use at least three (3) people to install or take down a ladder treestand.
- ▲ The criss-cross straps/ropes and stabilization devices must be attached before climbing to the platform.
- ▲ When installing a ladder stand, always bounce on the first rung to set the ladder into the ground according to manufacturer's instructions before proceeding to climb any higher.
- ▲ Check every ladder section connection every time you use the stand before you leave the ground. If ladder sections are separating, do not use the stand.
- ▲ Check the ground under the stand to make sure it is firm and level. Sloping ground or uneven surface (one side on a rock) can cause your ladder to tilt or shift off the tree as you climb.
- ▲ Always maintain three (3) points of contact when climbing a ladder treestand. Proper three-point contact means having either two feet with one hand or one foot with two hands on the step portion of the ladder or climbing aid at all times.



A

WARNING

- ▲ Always lean forward as you climb and attach your harness to the tree before securing the platform to the tree and stepping onto the platform.
- **A Never** exceed the stated maximum use height.
- ▲ Do Not use this product until you have watched the online safety video, understand it, and practiced the techniques for safe hunting discussed in this video. Video can be found with the QR code and/or URL shown on front cover of this manual.
- ▲ Read and perform all inspection and maintenance tasks before each and every use. Replace any questionable components immediately with RETI original replacement parts.
- ▲ **Do Not** crush tubing when tightening bolt assemblies! Identify and familiarize yourself with all parts before you start. Bolt identification chart can be found in the back.
- ▲ Double check assembly steps to be certain you have correctly assembled this product.
- ▲ **Never** use any product that has not been maintained or inspected properly Your life depends on it!
- A Replace any and all treestand straps every two years or when any signs of damage or wear exist before.
- ▲ Always wear the appropriate footwear when using a ladder treestand. A good non-slip safety boot is important to your personal safety. Be especially careful that boot laces do not get hooked on the stand or any of its components (tuck shoelaces into boots before climbing).

Λ

WARNING

▲ Only use approved RETI parts. Failure to do so may result in serious injury or death!

INSPECTION AND MAINTENANCE


BEFORE EACH USE PERFORM THE FOLLOWING:

- Inspect all webbing, rope, cord, and strap assemblies for wear or damage.
- Inspect cables and/or cable ends for damage or kinking.
- Inspect all hardware and chain components for damage or wear.
- Inspect for any structural damage to product. (If any exists stop use immediately and call RETI Customer Service.)
- Inspect all nut and bolt assemblies to be certain none are loose.
- · Inspect for any missing parts.
- Lubricate all pivot and slide together points with powder graphite, petroleum jelly or silicone spray to prevent noise, wear and rust.
- Inspect entire product for any rust, corrosion, cracks, freezing, excessive heat or rotting damage that may effect the safety of your product. Discard any questionable product.
- Inspect entire product for any structural damage pay close attention to all weld locations. (Discard product if any damage is found.)
- Using correct wrenches inspect all nut & bolt assembly locations and snug up any that may be loose. Be careful not to crush tubing when tightening!
- Inspect and check operation of all cables, cable ends, cord, rope, webbing, and strap or chain assemblies. Replace with RETI original replacement parts any item or assembly that shows signs of wear, damage, kinking, or functions incorrectly.
- Inspect seat for damage or wear. Replace any seat with factory new that shows signs of structural damage or wear.
- Never modify your stand in any way by making repairs, replacing parts, or altering by adding or attaching anything to it except if explicitly authorized in writing by the manufacturer.

Knob Qty 2

HARDWARE IDENTIFICATION CHART

Quick Tip: Cut page out to use as a reference tool while following assembly instructions

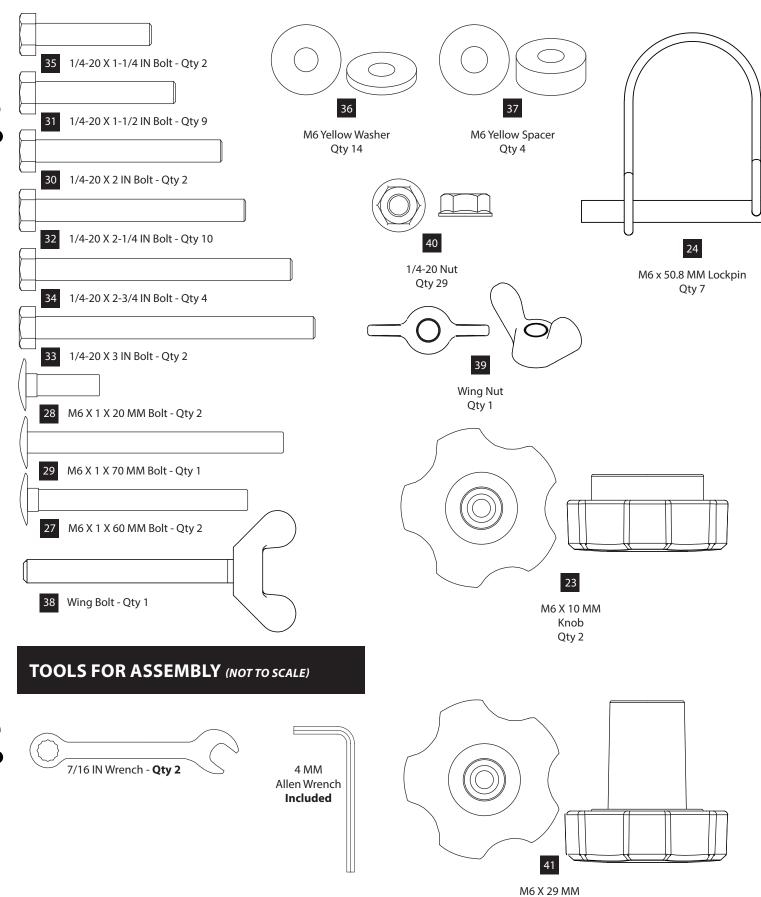

ASSEMBLY INSTRUCTIONS


IMPORTANT ASSEMBLY TIP:

Do not tighten any nut and bolt combinations completely until all parts are assembled together! Finger tighten plus one turn of a wrench only! This will temporarily hold the lock- nut on the bolt while helping alignment of all parts! After all parts are assembled together, all nut and bolt combinations must be completely tightened.

All assembly must be done in this order at ground level before uprighting.

Do not remove labels/warnings from product, they are there for your safety.

Recommended for adult use only.

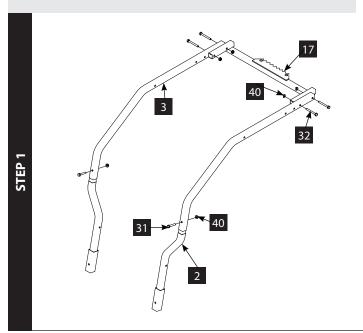


NOTE: When selecting a tree to install the treestand in, never use a treestand on a dead leaning, diseased or loose barked tree, or a utility pole. Always avoid electrical power lines.

 Join the two seat side rails (3) and two flared platform rails (2). Secure parts together with two 1/4-20 X 1-1/2 IN bolts (31) and two 1/4-20 nuts (40). SEE FIGURE 1.


Attach the top tree blade (17) using four 1/4 -20 X 2-1/4 IN bolts (32) and four 1/4-20 nuts (40). **SEE FIGURE 1.**

2. Attach the front of the armrests: left (6) and right (7) to the seat side rails (3), using two 1/4 -20 X 2-1/4 IN bolts (32), two yellow washers (36) and two 1/4-20 nuts (40). Be sure the armrest orientation is correct. SEE FIGURE 2.

Attach the rear of the armrests (6 and 7) to the seat side rails (3) and rear seat supports: left (9) and right (10) using two 1/4-20 X 3 IN bolts (33), two yellow washers (36) and two 1/4-20 nuts (40). **During this step the two M6 x 60 MM carriage bolts (29) must be inserted into the holes in the armrests (6 and 7) or they will not be able to be installed after the armrests have been assembled. SEE FIGURE 2.**

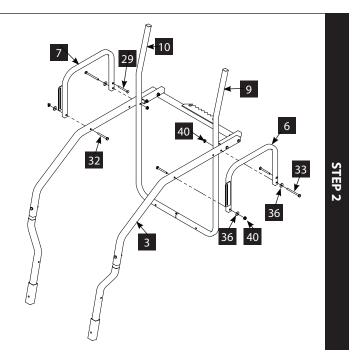




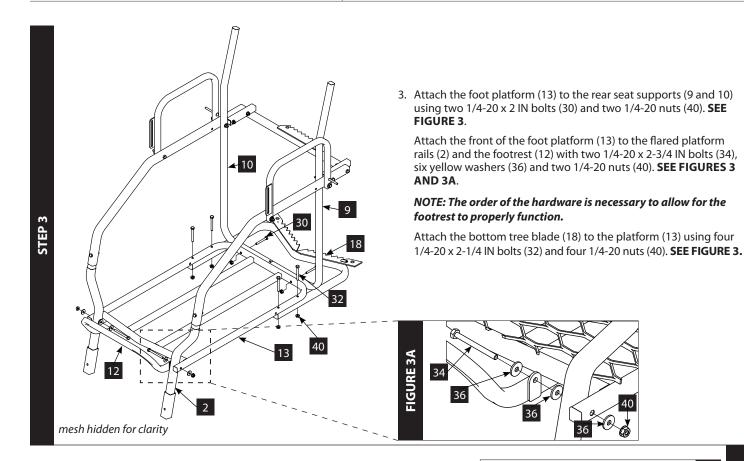


 Assemble M6 bolt (27) into end of front seat tensioner (11), screwing M6 bolt (27) all the way into front seat tensioner (11). SEE FIGURE 4A.

Install front seat tensioner assembly (11 and 27) through left tube and into right tube of Teartuff seat assembly (8), securing piece as shown using one 1/4-20 x 1-1/2 IN bolt (31) and 1/4-20 nut (40). Use the provided allen wrench to tighten M6 bolt (27) through hole in Teartuff seat assembly (8) to tension seat as desired. **SEE FIGURES 4 AND 4A.**

Push a 22 MM plug (26) into the open tube. SEE FIGURE 4.

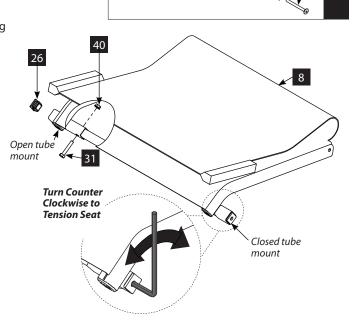


11

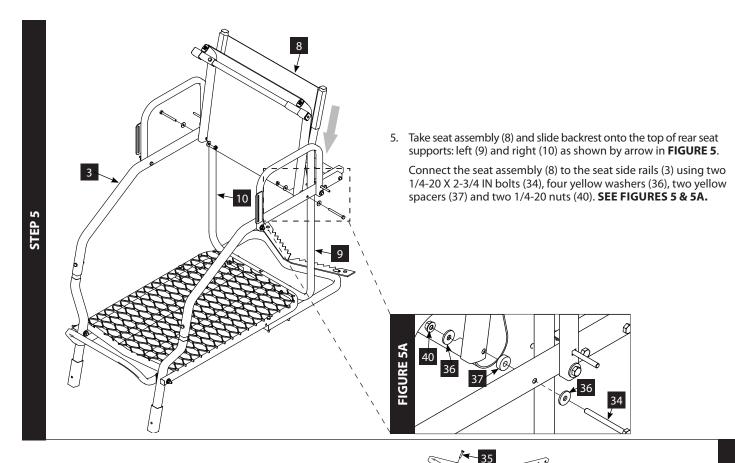


6. Connect the two shooting rail parts (4) to the shooting rail part (5) using two 1/4-20 X 1-1/4 IN bolts (35) and two 1/4-20 nuts (40). **SEE FIGURE 6.**

Install two M6 X 29 MM knobs (41) on armrests (6 and 7) with M6 X 20 MM carriage bolts (28). **SEE FIGURE 6.**

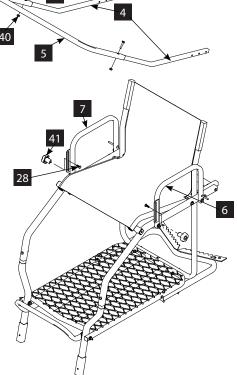



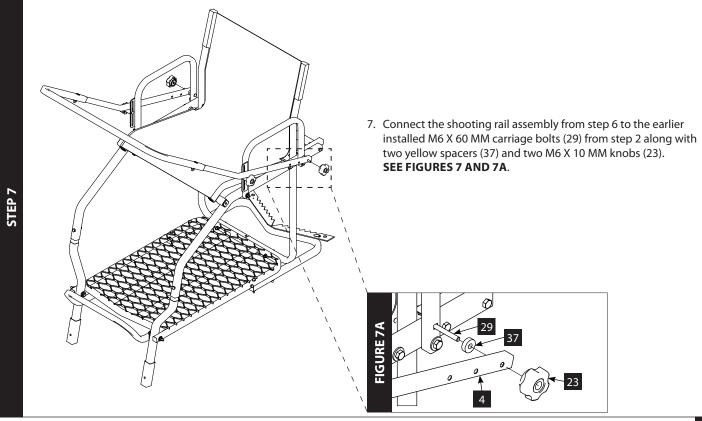


8. Attach top ladder section (14) to flared platform rails (2) using two 1/4-20 X 1-1/2 IN bolts (31) and two 1/4-20 nuts (40). **SEE FIGURE 8.**

Attach the two brace supports (19) to the *inside* of the foot platform (13) and the *outside* of the top ladder section (14), using four 1/4-20 X 1-1/2 IN bolts (31) and four 1/4-20 nuts (40). **SEE FIGURE 8.**


Attach the two provided 9 IN foam pads (21) to the armrests (6 and 7) by wrapping around tubing and attaching hook and loop together.

Attach the 66 IN foam pad (22) to the shooting rail assembly by wrapping the sleeve around the tubing and attaching the hook and loop together.

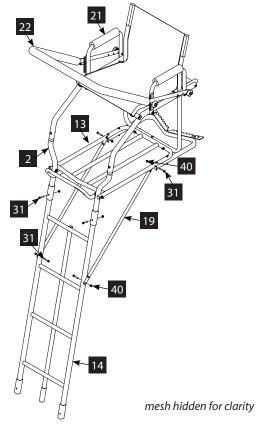


STEP 9


 Ladder sections are assembled on the ground in the following order: bottom ladder section (16), two middle ladder sections (15) and the top ladder section (14) with the treestand top assembly. Connect all sections together using six lockpins (24). SEE FIGURE 9.

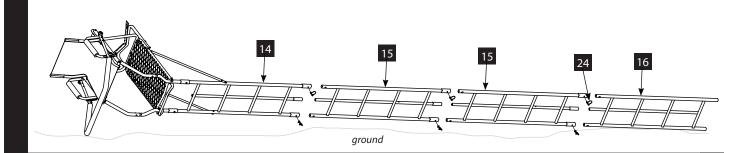

10. Slide the stabilizer bar (1) into the stabilizer support bar (20) and secure using a lockpin (24). Make sure the lockpin passes through the support bar (20) and the stabilizer bar (1) at the appropriate hole to achieve the desired distance from the tree. Adjustment in length may be needed when ladder is uprighted later in the Setup and Use Instructions. Connect the stabilizer bar assembly through the lower middle ladder section (15) with one wing bolt (38) and one wing nut (39). **SEE FIGURE 10.**

NOTE: Treestand should ALWAYS be fully assembled on the ground prior to mounting it in the tree.

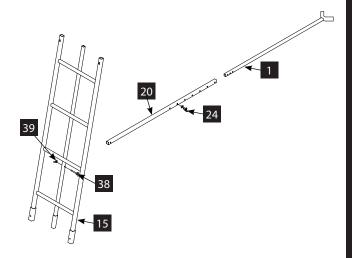

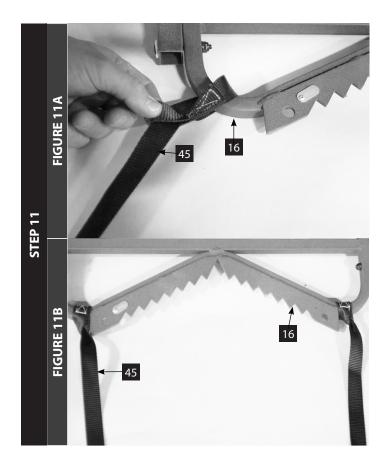

11. Attach the two long ends of the 21' criss-cross straps (45) to the bottom tree blade (16). These long stabilizer straps should be attached by pulling the free end of the strap through the loop end of the strap to create a cinch knot around the frame tube.

SEE FIGURES 11A AND 11B.





READ AND UNDERSTAND THE FOLLOWING WARNINGS BEFORE SETUP AND USE



WARNING

- ▲ Double check assembly steps to be certain you have correctly assembled this product.
- ▲ Study your new stand to become familiar with all of its features and design. At ground level, following provided use instructions, practice attaching stand to tree and removing stand from tree. Practice sitting, standing, and using this product before attaching overhead. Save these instructions for future reference. You must always use the provided Fall Arrest System (FAS) while using this product.
- ▲ Always use at least three (3) people to install or take down a ladder treestand. Always have two people stabilize the ladder before climbing to the platform the first time after every set-up.
- ▲ Be absolutely sure the tree blade(s) on stand and the stabilizer bar are contacting tree before climbing ladder.
- ▲ Stabilizer bar must always be correctly and securely attached to ladder and tree before climbing ladder.
- ▲ Make sure ladder bottom is firmly seated on dry, level ground. Attach your harness tether to the tree before securing the platform to the tree and stepping onto platform. Refer to the Full Body Harness instructions.
- ▲ Never ascend or descend ladder without criss-cross straps/ropes securely holding ladder to tree and stabilizer bar securely attached. Failure to correctly perform these steps can cause the ladder to collapse/buckle-over backwards during the initial ascent to attach ratchet strap resulting in serious injury or death.
- ▲ Always lean forward as you climb and attach your harness to the tree before securing the platform to the tree and stepping onto the platform.



WARNING

▲ Bring ratchet strap(s) up with you in a pocket - **Do Not** carry in your hands!



WARNING

- ▲ Always maintain three (3) points of contact when climbing a ladder treestand. Proper three-point contact means having either two feet with one hand or one foot with two hands on the step portion of the ladder or climbing aid at all times.
- ▲ Always wear the appropriate footwear when using a ladder treestand. A good non-slip safety boot is important to your personal safety. Be especially careful that boot laces do not get hooked on the stand or any of its components (tuck shoelaces into boots before climbing).
- ▲ **Never** stand on seat, it is designed for sitting only.
- ▲ **Do Not** allow excessive strap buildup in ratchet as this will prevent the ratchet teeth from engaging causing slippage.
- ▲ Always attach ratchet straps securely while using this product!
- ▲ If seat is removable, be certain it is securely attached when in use.
- ▲ Some models include a shooting rail. **Never** lean against, lean over, or sit on shooting rail. It is designed as a shooting rest only. **Always** be aware that the shooting rail can swing to one side or pivot up and down.
- ▲ Some models include a footrest, which is designed as a footrest only. **Never** stand on footrest! **Always** be fully aware of foot placement.
- ▲ Some models include a multi-piece stabilizer bar system. Be sure attachment hardware goes through both the extension tube and the stabilizer bar.



SET UP AND USE INSTRUCTIONS





WARNING

- ▲ Never use a treestand on a dead, leaning, diseased or loose barked tree, or a utility pole. Always avoid electrical power lines.
- ▲ Bring ratchet strap(s) up with you in a pocket **Do not** carry in your hands!


During installation and removal of ladder treestands, you must always and properly use the included Full Body Harness (Fall Arrest System). Refer to the Full Body Harness instructions included with this product for proper use.

- 1. Select a straight, healthy tree. Do not attempt to install on a tree that is not healthy.
- With assembled product lying on the ground, <u>position one person</u> at bottom end of ladder lying on the ground. This person has to prevent the ladder end from tilting up when platform end is lifted and prevent the ladder from skidding across ground.
- a. Position two people at the platform end of the ladder, lift the
 platform end and continue uprighting by walking toward bottom
 end of ladder and moving hands along ladder legs. Stand ladder
 up against chosen straight tree on dry, level ground. Use
 caution when ladder comes over center against the tree. SEE
 FIGURE 12(A).
 - b. Step back and look at the ladder top to see that it is level. Adjust as needed to achieve a level platform top. Make sure tree blade is contacting tree. **SEE FIGURE 12(B).**
 - c. Step down hard on bottom step to push ladder legs into the ground. **SEE FIGURE 12(C).**
- 4. While two people hold the stand in place, the third person should connect the horizontal stabilizer bar to the tree. Adjust the length of the stabilizer bar as need so it contacts the tree and is level to the ground. Then secure it to the tree with the 6' cam strap (44) by forming a cinch knot with both ends of the strap and running the long end of the strap through the cam buckle. SEE FIGURES 13 AND 14.

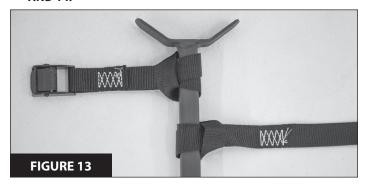

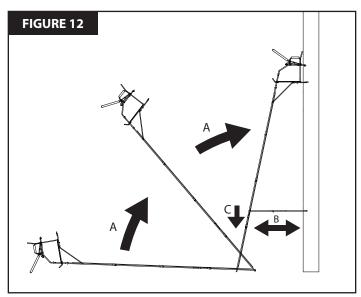



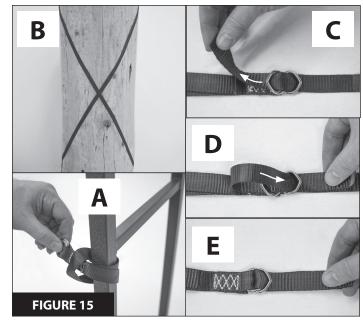



- a. Loop the D-loop end of the two 21' criss cross straps (45) through the loop end to form a cinch knot around the ladder rail tube. Secure beneath a step rung, at the stabilizer bar height location. SEE FIGURE 15A.
 - b. With the stand level and being held in place by two people, the third person must cross one of the 21' criss cross straps (45) behind the tree and feed the free end through the opposite D-loop. **SEE FIGURES 15B-E.**
 - c. Criss cross the other 21' stabilizer strap (45), forming an "X" pattern on the of the tree and feed the free end through the opposite D-loop. **SEE FIGURES 15B-E.**
- 6. Make sure the criss cross straps and stabilizer bar strap are snug and the tree blade is still contacting the tree.
 - NOTE: This ground level ladder-to-tree attachment will prevent the ladder from pulling away from the tree while ascending to the top for final 6' ratchet strap (43) attachment. The same holds true when the ladder is removed.
- 7. With two people securely holding the ladder, use the three point contact climbing method to slowly climb the ladder and carefully keep a constant hand grip on the ladder at all times. Always lean forward, toward tree, to keep top section tree blades against the tree. Be certain ladder bottom is firmly seated on dry, level ground. Attach your harness tether to the tree before securing the platform to the tree and stepping onto platform. Refer to the Full Body Harness instructions included with this product.

NOTE: Bring ratchet straps up with you in a pocket. DO NOT carry in your hand!

7a. Standing on ladder step, lean toward tree with ratchet strap (43) now in hand, hook "S" hook with long strap through hole provided on bottom tree blade. Feed the long strap through the center (slot) of ratcheting mechanism and back around through tightening lever. **SEE FIGURES 16A, 16B AND 17.**

NOTE: Be sure you feed the long strap correctly so there are no twists in the strap.


b. Wrap entire ratchet assembly around tree and hook other "S" hook through opposite upper tree blade hole. Pull tail of long strap until most of the slack is taken out. Be sure entire strap is even and at the same level all around tree. "Ratchet" tight to tree, this will securely attach ladder to tree and prevent movement. **SEE FIGURES 16B AND 16C.**


c. Repeat steps 7a-7b for top tree blade.

NOTE: Make sure there is at least two full revolutions of strap on the ratchet spool before the strap tightens. Proper tension will ensure the stand is secured to the tree. Do not allow excessive strap to build up in the ratchet as this will prevent the ratchet teeth from engaging and can cause slippage.

To release ratchet, simply pull the release lever and open tightening lever wide open (flat). SEE FIGURE 16D.

- 8. If necessary, re-check and adjust the 6' ratchet straps (43), 21' criss cross straps (45) and horizontal stabilizer bar assembly to securely attach the treestand to the tree. The tree blades must be touching the tree. **SEE FIGURE 17.**
- 9. You are now ready to use your ladder stand.

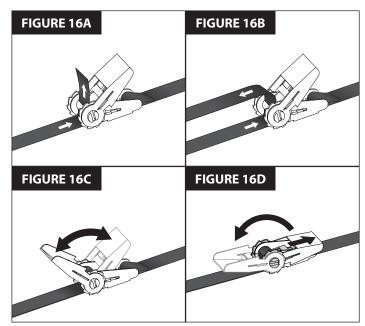

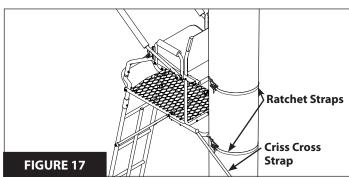




IMPORTANT

▲ Reverse the Set-Up and Use Instructions to take the ladder stand down.




FINISHED LADDER

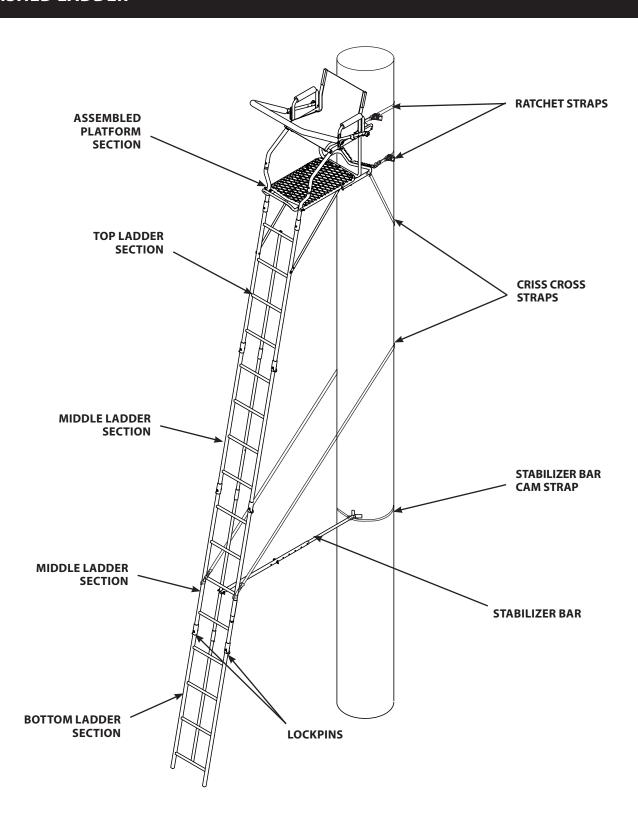



ILLUSTRATED PARTS BREAKDOWN

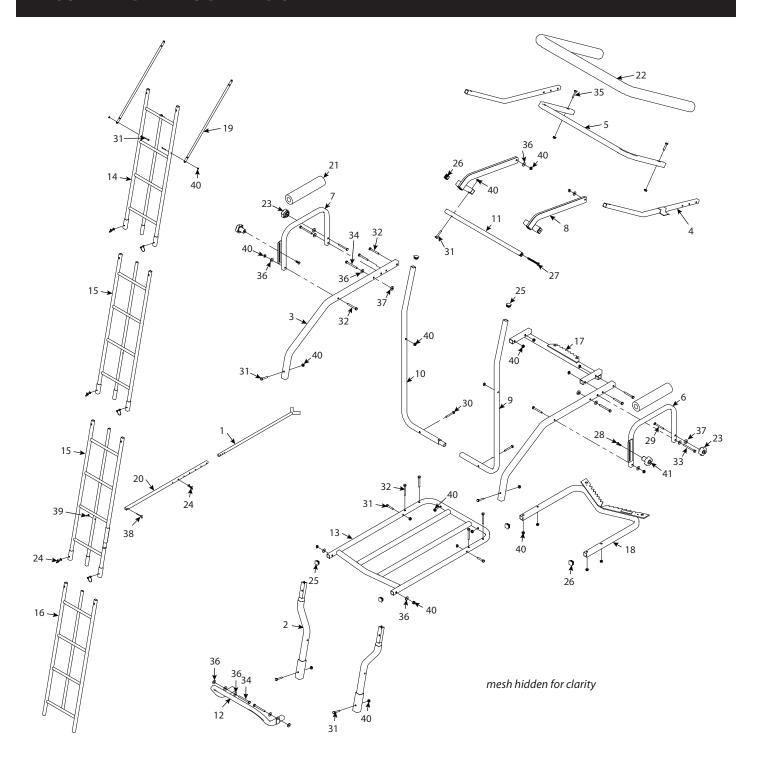



PARTS LIST

ITEM#	PART #	DESCRIPTION	QTY.
1	27397	STABILIZER BAR 39 IN	1
2	28676	FLARED PLATFORM RAIL	2
3	28677	SEAT SIDE RAIL	2
4	28678	SHOOTING RAIL "A"	2
5	28679	SHOOTING RAIL "B"	1
6	28680	ARMREST LEFT	1
7	28681	ARMREST RIGHT	1
8	28685	ASSEMBLY TEARTUFF SEAT	1
9	28689	REAR SEAT SUPPORT LEFT	1
10	28690	REAR SEAT SUPPORT RIGHT	1
11	28691	FRONT SEAT TENSIONER	1
12	30512	FOOTREST	1
13	35850	FOOT PLATFORM	1
14	35852	TOP LADDER SECTION	1
15	35854	MIDDLE LADDER SECTION	2
16	35856	BOTTOM LADDER SECTION	1
17	35858	TOP TREE BLADE	1
18	35860	BOTTOM TREE BLADE	1
19	410024	BRACE SUPPORT	2
20	48053	STABILIZER SUPPORT BAR	1
21	48736	SLEEVE W/FOAM 9 IN	2
22	48874	SLEEVE W/FOAM 66 IN	1
23	23604	M6 X 10 MM KNOB	2
24	19847	LOCKPIN	7
25	19175	SQ END PLUG 19 MM	4
26	23439	SQ END PLUG 22 MM	3
27	26959	BOLT M6 X 70 MM	1

ITEM#	PART #	DESCRIPTION	QTY.	
28	26813	BOLT M6 X 20 MM	2	
29	29727	BOLT M6 X 60 MM	2	
30	48153B	BOLT 1/4-20 X 2 IN	2	
31	48240B	BOLT 1/4-20 X 1-1/2 IN	9	
32	48271B	BOLT 1/4-20 X 2-1/4 IN	10	
33	48280B	BOLT 1/4-20 X 3 IN	2	
34	67540B	BOLT 1/4-20 X 2-3/4 IN	4	
35	8909B	BOLT 1/4-20 X 1-1/4 IN	2	
36	23572	M6 YELLOW WASHER	14	
37	26913	M6 YELLOW SPACER	4	
38	48057B	WING BOLT	1	
39	48042B	WING NUT	1	
40	48752B	1/4-20 NUT	29	
41	28839	M6 X 29 MM KNOB	2	
ITEMS BELOW NOT SHOWN				
42	40697	FALL ARREST SYSTEM (FAS)	1	
43	48415	STRAP W/RATCHET AND S-HOOKS	2	
44	MK021-1401	CAM STRAP ASSEMBLY 6 FT	2	
45	MK036-6611	STABILIZER STRAP ASSEMBLY 21 FT	1	

NO EXTENSIONS AVAILABLE FOR THIS MODEL.
NEVER MODIFY OR EXCEED ORIGINAL STATED USE HEIGHT!



NOTES	

19



WE ARE HUNTERS

Rivers Edge® Treestands, Inc.

1730 Industrial Avenue, PO Box 755 Cumberland, WI 54829 Phone: 800-345-6007

Fax: 715-822-2124

www.HuntRiversEdge.com

*All weights, specifications and features are approximate and are subject to change without notice. Due to continuous product improvements, product images may not be exact. Warning labels in some product images may have been removed for photography purposes only. Props shown in photos not included. Some assembly may be required.